

# Remote Wifi Management (Optional)

## Adding a Gateway

Please note that when adding a gateway, your smartphone and the gateway must be connected to the same Wi-Fi network.

### Light Status



When the gateway is powered on:



Light flashes alternately in red and blue:  
Stand-by mode, ready for pairing



Blue light: Working mode



Red light: Network failure

### Pair the Gateway with APP

1 Activate the APP




2 Press “≡”




3 Select [Gateway]



4 Select [G2]

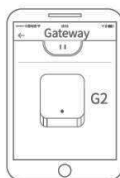

 5 Plug in the gateway and power it on, while the light flashes alternately in red and blue



6 Press “+” sign



7 Add Gateway




8 Select the network and fill in the password



9 Add complete

⚠ Notice: If times out, please power off and try it again.

TTLock is directly connected via Bluetooth and is not connected to the network itself, which is why it is not vulnerable to network attacks. The gateway is an accessory of the smart lock, it is the bridge connecting the smart lock and the home wifi network. Through the gateway, users can remotely view and calibrate the lock clock, read the unlocking records of passwords in a timely manner and remotely delete and modify passwords.

After confirming that your phone and door lock are connected to the gateway click "  " to unlock. You can unlock it anywhere you have a network.