



ALGIN WITH CENTER OF DOOR FRAME

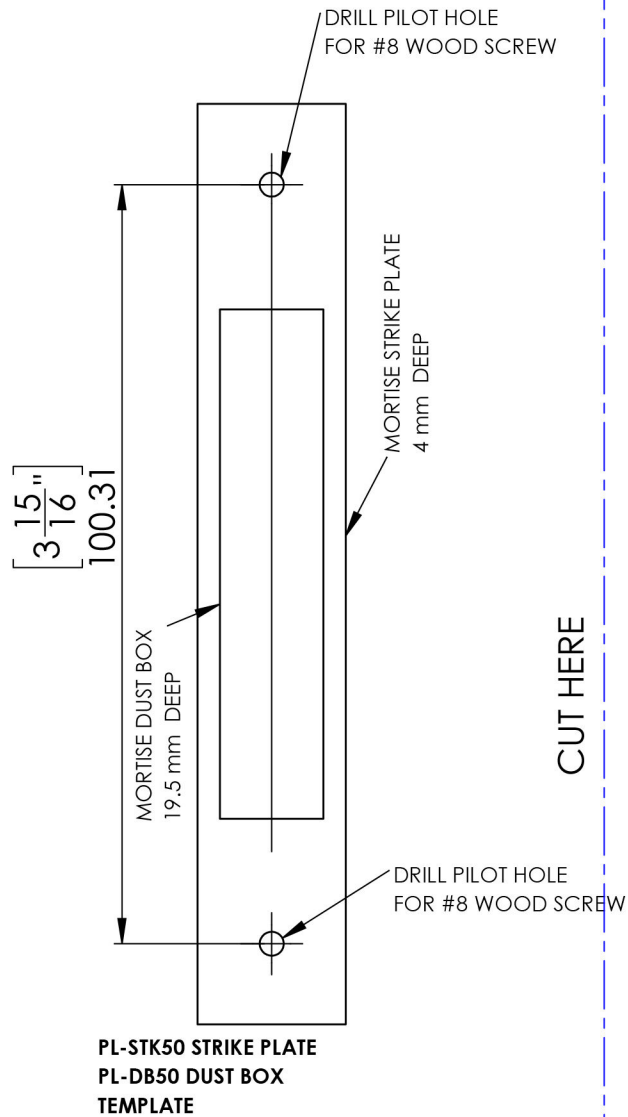

CUT HERE


MEASUREMENTS ARE IN INCHES AND MILLIMETERS
INCHES ARE SHOWN IN []

ALGIN WITH CENTER OF DOOR

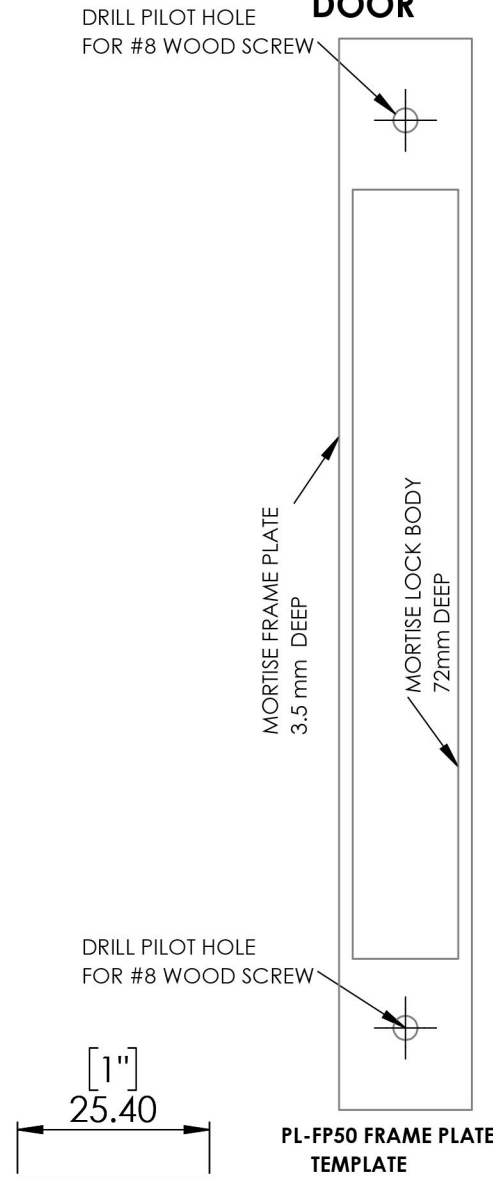


PRINT THIS PAGE AT 100% SCALE

1 3/8" THICK DOOR

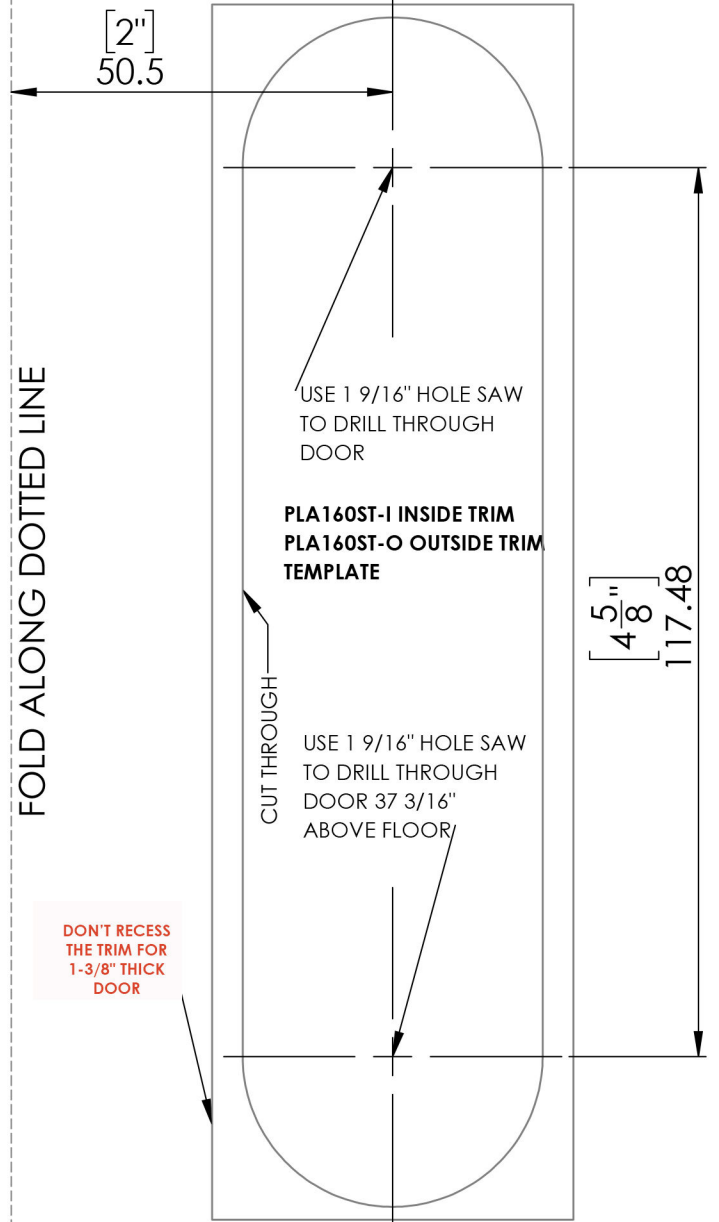


ALGIN WITH CENTER OF DOOR FRAME

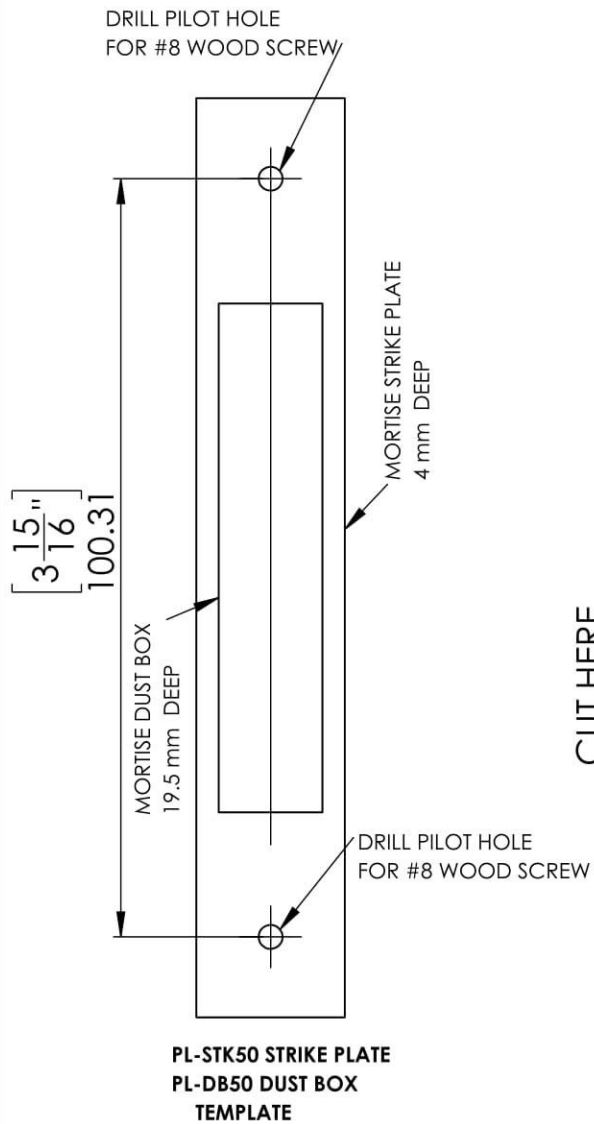


CUT HERE

ALGIN WITH CENTER OF DOOR

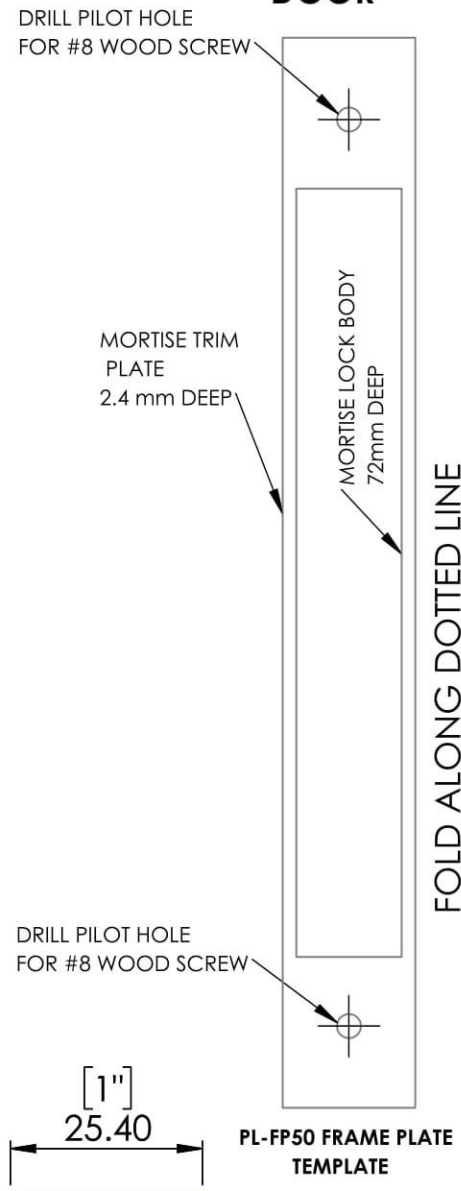

1 3/4" THICK DOOR

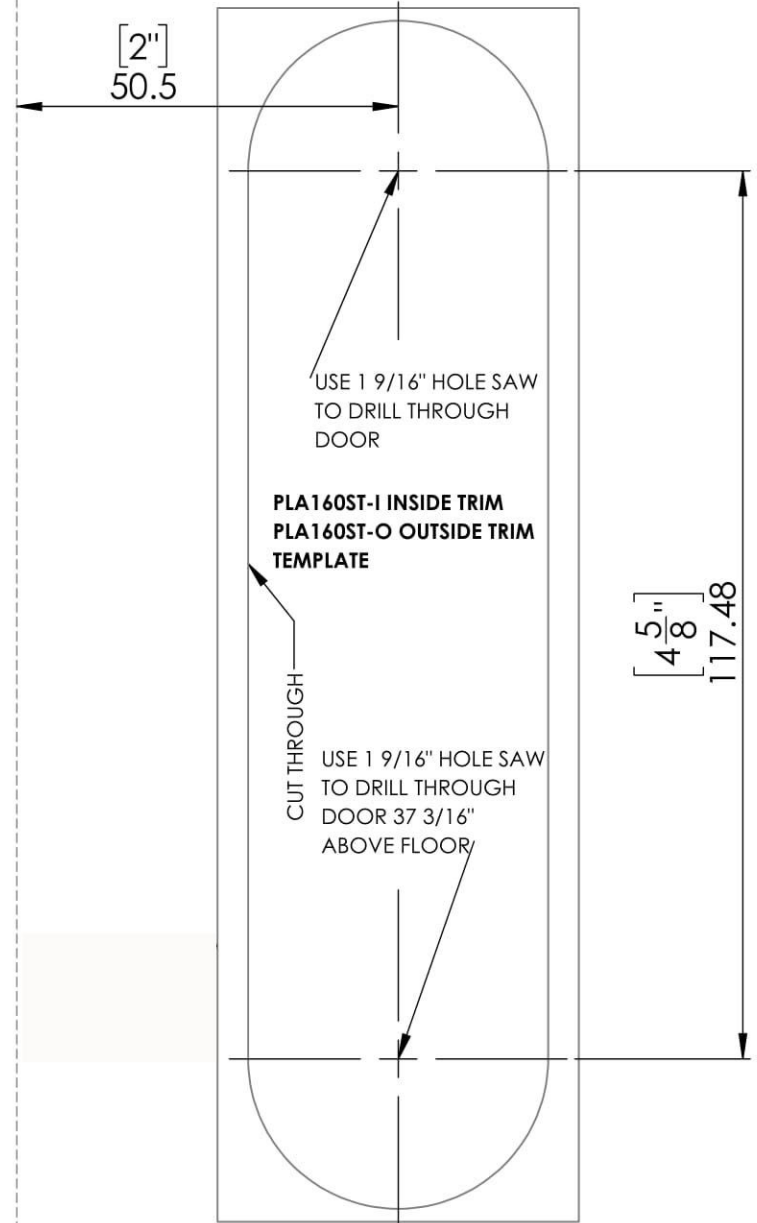


MEASUREMENTS ARE IN INCHES AND MILLIMETERS
INCHES ARE SHOWN IN []

PRINT THIS PAGE AT 100% SCALE


Print template full scale
paper template.
Drill 3.175 mm [1/8"]
on door center
943.4mm [37 9/64"]
above floor

STEP 1

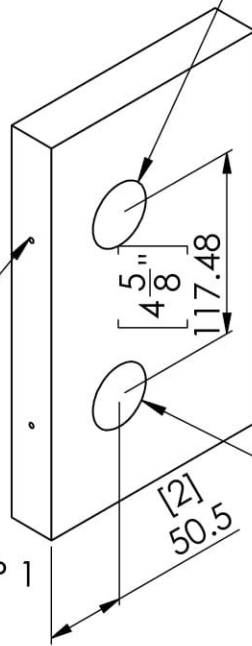


Print template full scale
fold and position on door.
Use hole saw to drill
39.68 mm [1 9/16"]
through door.

Print template full scale
fold and position on door.
Use hole saw to drill
39.68 mm [1 9/16"]
through door 944.5mm [37 3/16"]
above floor.

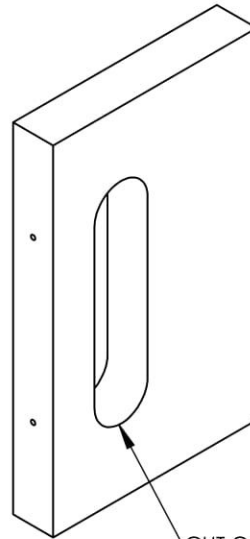

STEP 2


CUT OVAL
THROUGH DOOR

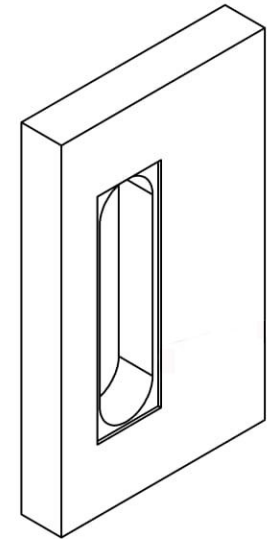

STEP 3


MORTISE FACE PLATE
3.5 mm DEEP

STEP 4

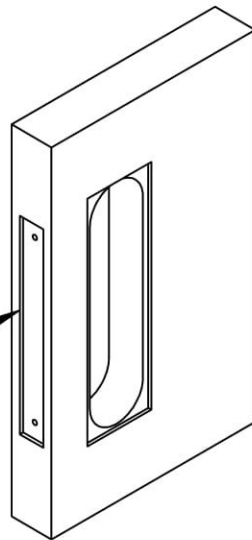

MORTISE LOCK BODY
72mm DEEP

STEP 5

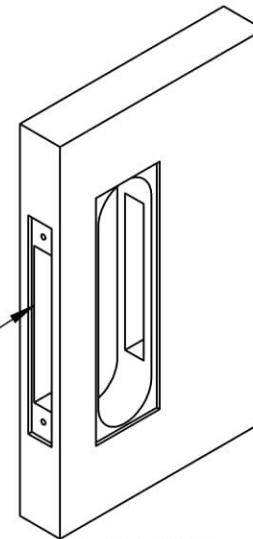

Linnea®

www.linnea-home.com Toll Free 800-219-2366 Ph 770-559-9035

PL160S-PR