

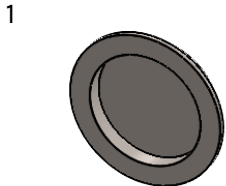


PL-66R Full Dummy Installation Diagram

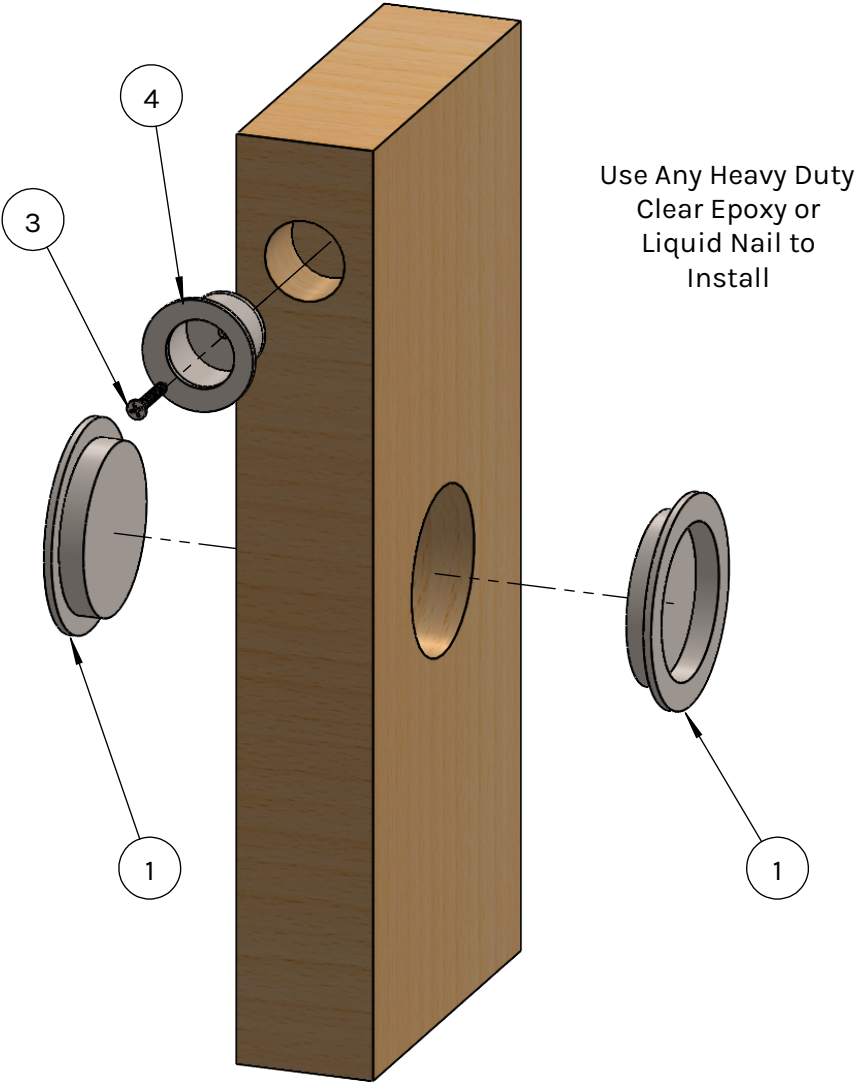

Dummy Rose
PLD66R
(Needs 2)

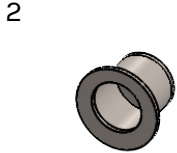

Edge Pull
EP-400R
(Needs 1)



Wood Screw
#8 X 3/4
(Needs 1)

