

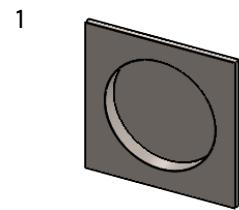


# PL-66S Full Dummy Installation Diagram

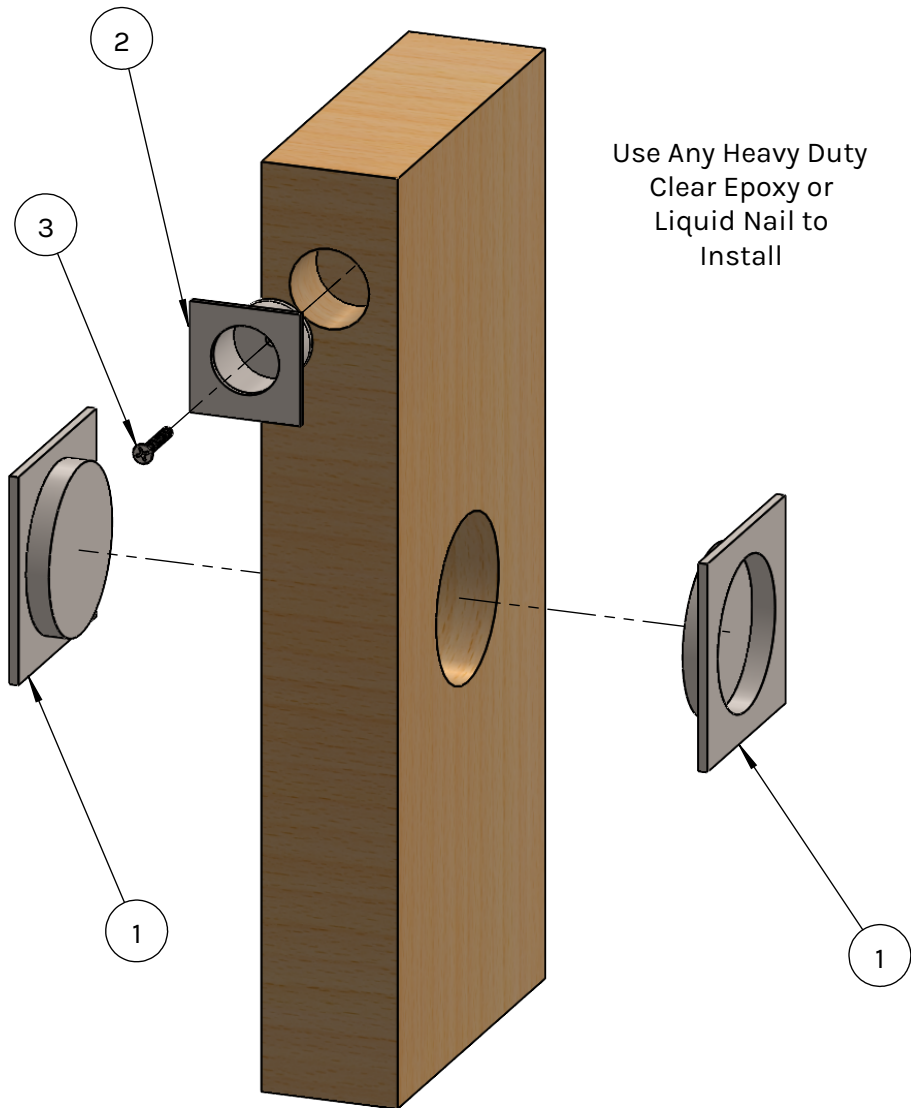

Dummy Rose  
PLD66S  
(Needs 2)

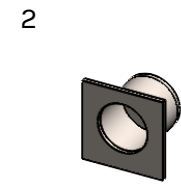

Edge Pull  
EP-400S  
(Needs 1)



Wood Screw  
#8 X 3/4  
(Needs 1)

