


PL190 Entry Diagram Installation

1. Knob is supplied pre-installed on the inside trim.
2. Trims are not required to be recessed to accommodate pocket width; but a door thickness 1-3/4" is required if opting for a recessed trim. Trims cannot be recessed on a 1-3/8" thick door.
3. Measure the trim dimensions before cutting the door due to minor tolerances in overall dimensions.

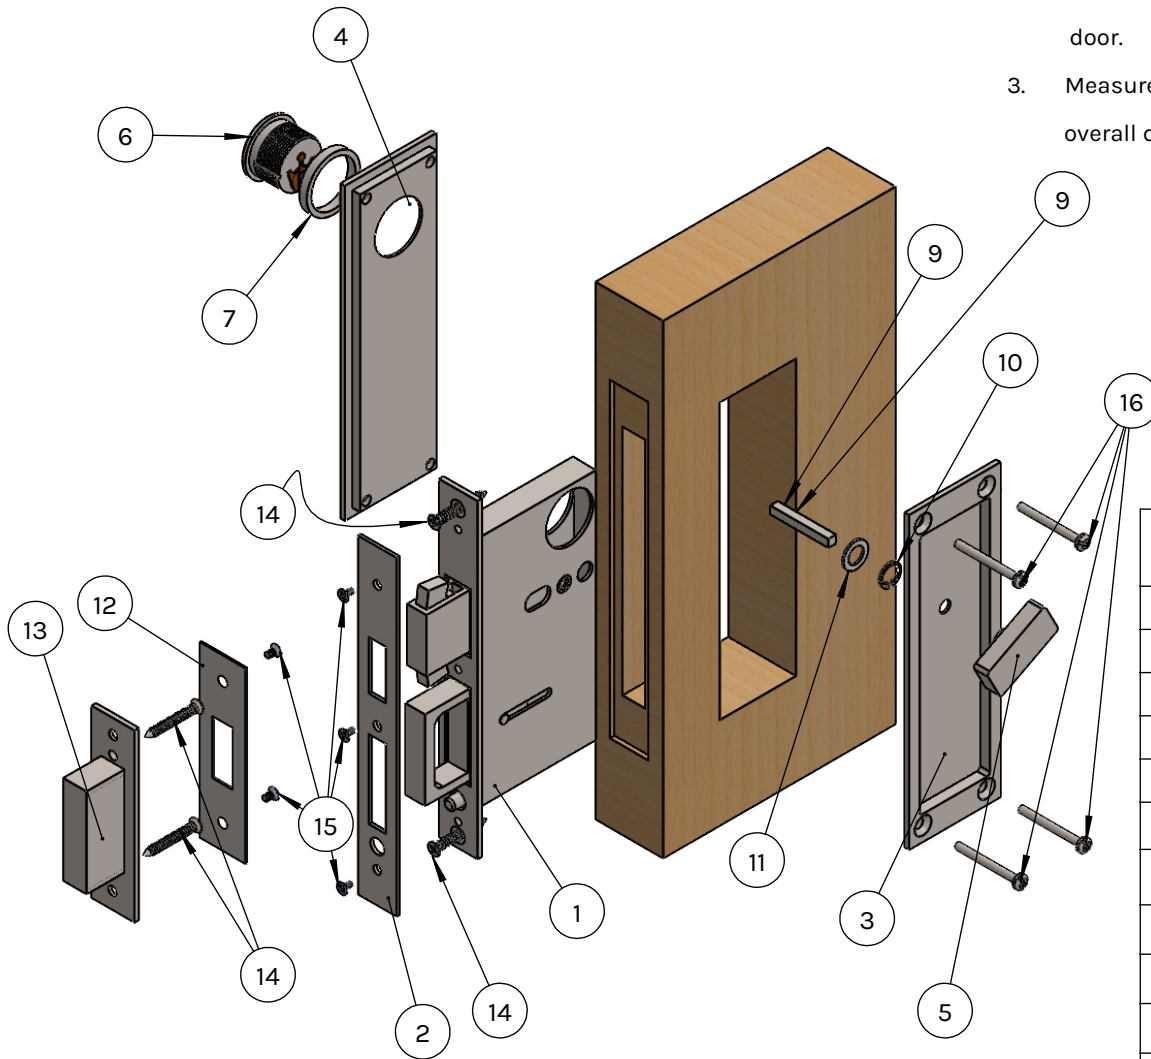

ITEM NO.	PART NAME	SKU #	QTY.
1	PL190 Tower Mortise Lock	PLM-203RP-USS	1
2	Face Plate	PLM-203PR-FP	1
3	Inside Trim	PLA190ST-I	1
4	Outside Trim Entry	PLA190ST-O	1
5	Turnpiece	PL-KNSTR	1
6	Entry	PL-CY2919	1
7	Cylinder Collar	CC35	1
8	Spindle 38	PL-SPDL38-USS	1
9	Spindle 28	PL-SPDL28-USS	1
10	Snap Ring	PL-CLLIPUSS	1
11	Plastic Spacer	PL-WAS12	1
12	Strike Plate	PLM-203PR-ST	1
13	Dust Box	PL-DBOX190	1
14	Wood Screw	#8 x 3/4	4
15	Plate Screw	PLSCR6	5
16	Machine Screw	PL-OVSCR50	4

