


# PL190 Full Dummy Diagram Installation

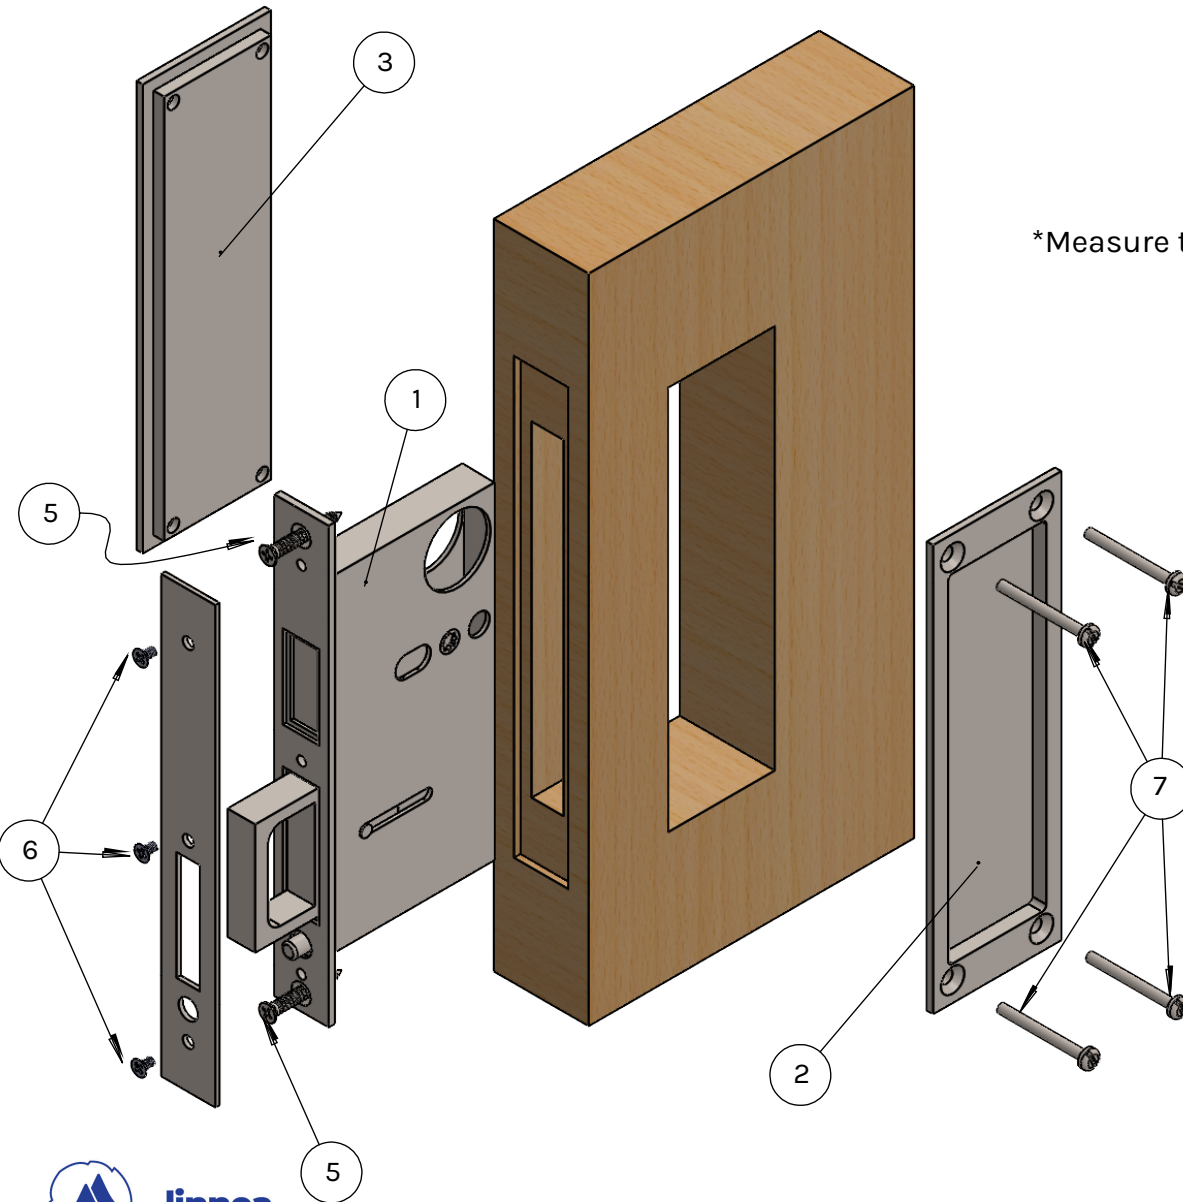

\*Measure the trim dimensions before cutting the door due to minor tolerances in overall dimensions.

ITEM NO.	ITEM NAME	SKU #	QTY.
1	PL190 Mortise	PLM-203PA	1
2	Inside Trim	PLD190ST-I	1
3	Outside Trim	PLD190ST-O	1
4	Face Plate	PLM-203FP	1
5	Wood Screw	#8 x 3/4	2
6	Plate Screw	PLSCR6	3
7	Machine Screw	PL-OVSCR50	4

