


PL190 Privacy Diagram Installation

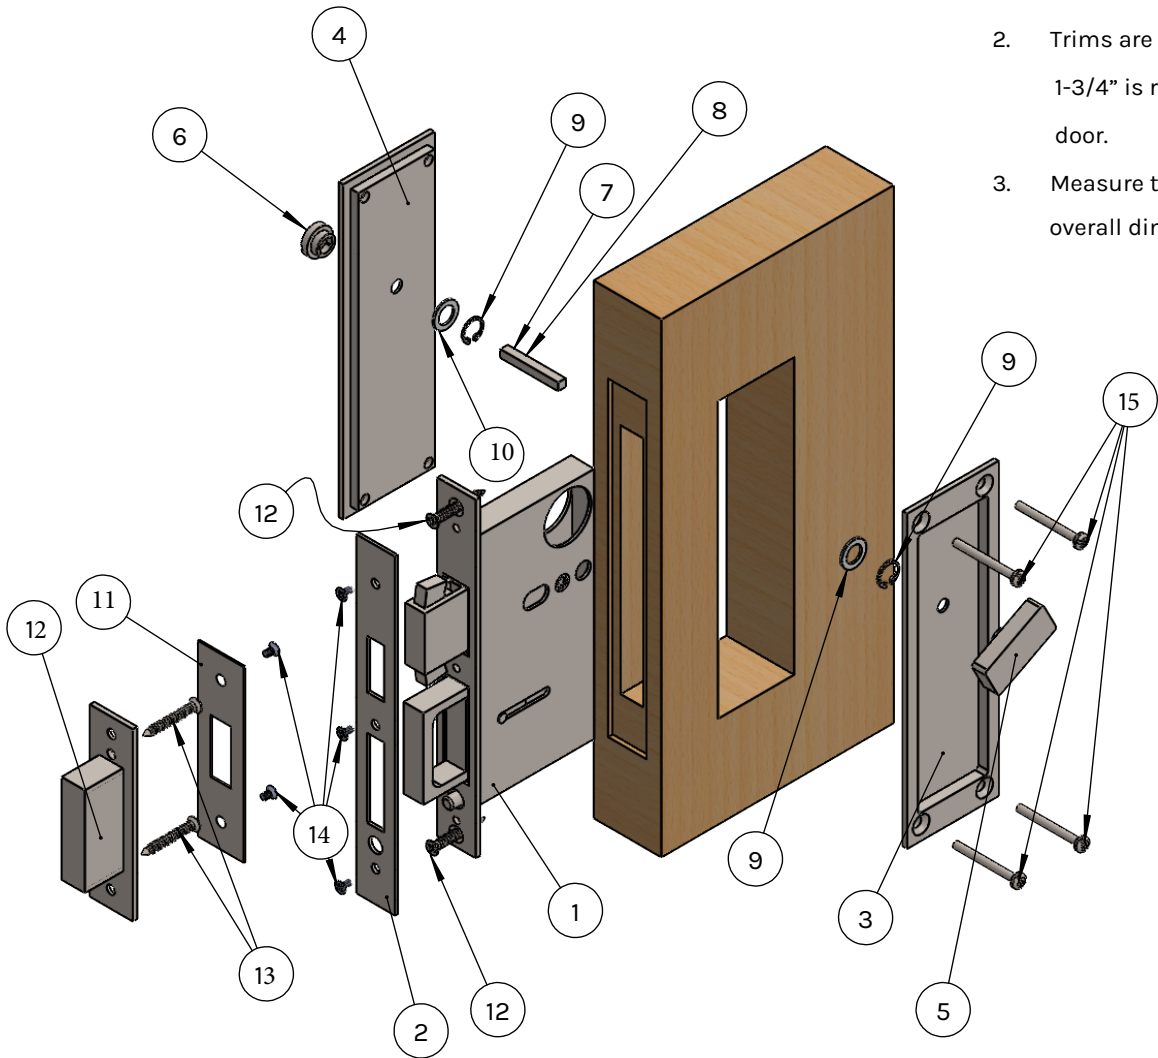

1. Knob and emergency release are supplied pre-installed.
2. Trims are not required to be recessed to accommodate pocket width; but a door thickness 1-3/4" is required if opting for a recessed trim. Trims cannot be recessed on a 1-3/8" thick door.
3. Measure the trim dimensions before cutting the door due to minor tolerances in overall dimensions.

ITEM NO.	PART NAME	DESCRIPTION	QTY.
1	PL190 Mortise Lock	PLM-203RP-USS	1
2	Face Plate	PLM-203PR-FP	1
3	Inside Trim	PLA190ST-I	1
4	Outside Trim	PLA190ST-O	1
5	Turnpiece	PL-KNSTR	1
6	Emergency Release	PL-KNER	1
7	Spindle 28	PL-SPDL28-USS	1
8	Spindle 38	PL-SPDL38-USS	1
9	Snap Ring	PL-CLLIPUSS	2
10	Plastic Spacer	PL-WAS12	2
11	Strike Plate	PLM-203PR-ST	1
12	Dust Box	PL-DBOX190	1
13	Wood Screw	#8 x 3/4	4
14	Plate Screw	PLSCR6	5
15	Machine Screw	PL-OVSCR50	4

