


PL190 ADA Entry Diagram Installation

1. Turnpiece is supplied pre-installed on the inside trim.
2. Trims are not required to be recessed to accommodate pocket width; but a door thickness of 1-3/4" is required if opting for a recessed trim. Trims cannot be recessed on a 1-3/8" thick door.
3. Measure the trim dimensions before cutting the door due to minor tolerances in overall dimensions.

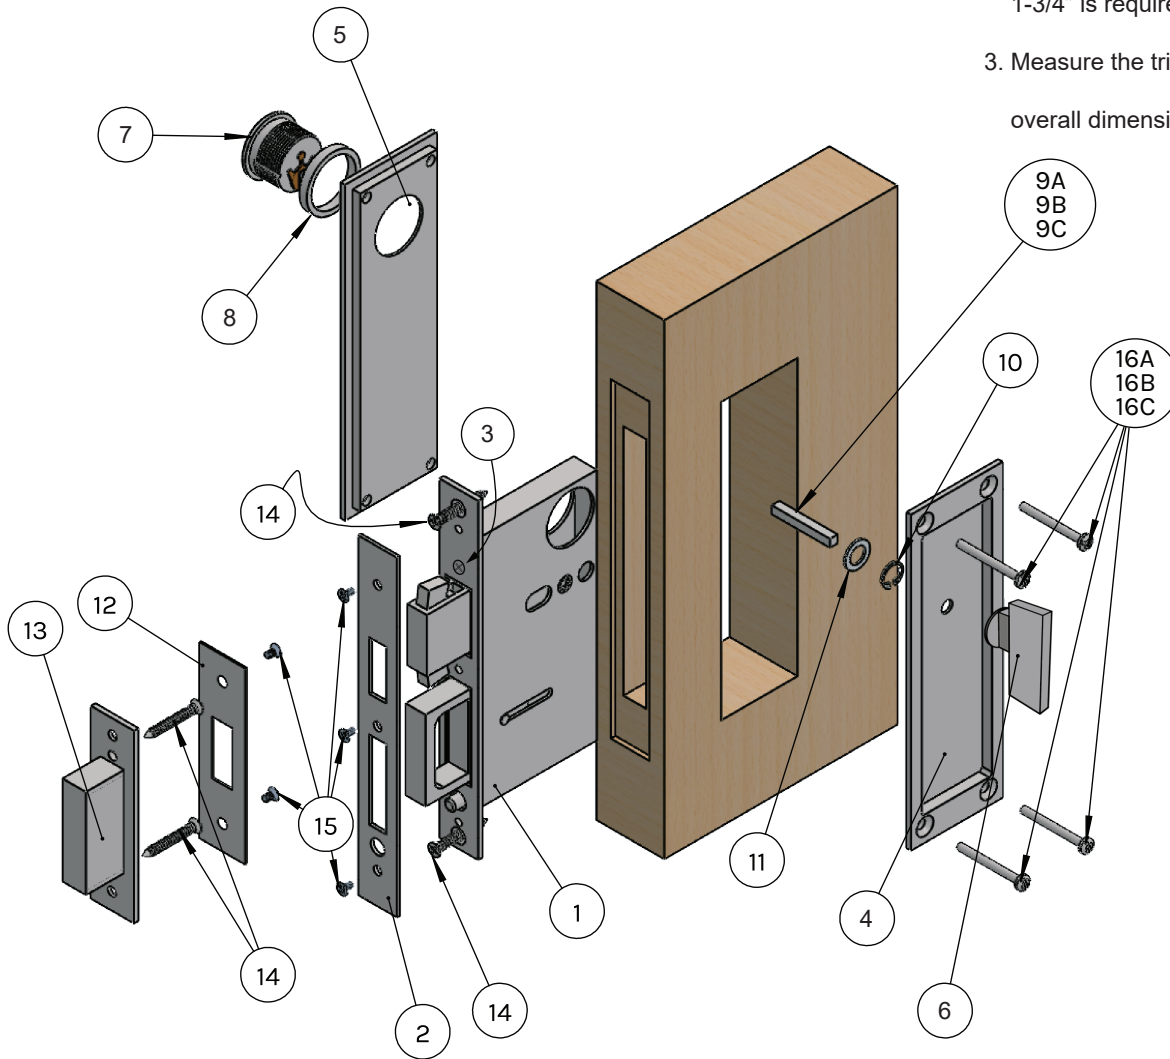

ITEM NO.	PART NAME	SKU #	QTY.
1	PL190 Mortise Lock	PLM-203PR	1
2	Face Plate	PLM-203PR-FP	1
3	Cylinder Screw	CYLSCRW	1
4	Inside Trim	PLA190ST-I	1
5	Outside Trim	PLA190ST-O	1
6	Turnpiece	PL-KNADA	1
7	Entry Cylinder	PL-CY2919	1
8	Cylinder Collar	CC35	1
9A	Spindle 31	PL-SPDL31	1
9B	Spindle 36	PL-SPDL36	1
9C	Spindle 41	PL-SPDL41	1
10	Snap Ring	PL-CCLIPS	1
11	Plastic Spacer	PL-WAS12	1
12	Strike Plate	PLM-203PR-ST	1
13	Dust Box	PL-DBOX190	1
14	Wood Screw	#8 x 3/4	4
15	Plate Screw	PLSCR6	5
16A	Machine Screw	PL-OVSCR35	4
16B	Machine Screw	PL-OVSCR45	4
16C	Machine Screw	PL-OVSCR48 Breakaway	4

